



INSTALLATION INSTRUCTIONS

JUNO TYPE IC & TC RECESSED HOUSING

WARNING: For your safety, read and understand instructions completely before starting installation.

Before wiring to power supply, turn off electricity at the fuse or circuit breaker box.

NOTE: Juno recessed fixtures are designed to meet the latest NEC requirements and are listed in full compliance with UL1571, 1570 or 1598. Before attempting installation of any recessed lighting fixture, check your local electrical building code. This code sets the wiring standards and installation requirements for your locality and should be understood before starting work. Use of non-Juno trims voids Juno warranty.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS:

When using electrical equipment, always adhere to basic safety precautions including the following:

TYPE TC & PL FOR NON-INSULATED CEILINGS

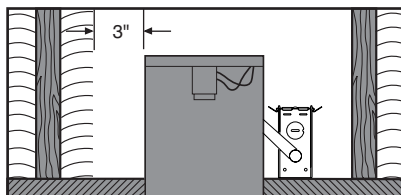


Figure 1

Juno Type TC & PL fixtures are designed for installations where housing and J-Box will not come into contact with insulation. Insulation must be spaced 3" away from the housing and J-Box (Fig. 1)*. Blinking light after installation indicates that improper bulb or trim is being used or that fixture has been improperly covered with insulation.

TYPE IC FOR INSULATED CEILINGS

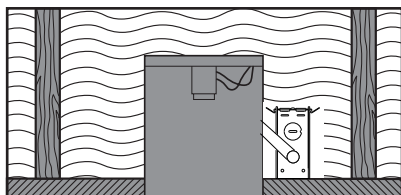


Figure 2

Juno Type IC fixtures are designed for direct contact with insulating materials which are approved for this application (Fig. 2). Blinking light after installation indicates that improper bulb or trim is being used.

Use Juno Air-Loc Gaskets or Air-Loc Rated Trims with Juno IC housings for additional energy savings and to comply with Washington State and other energy codes.

**In Canada, when insulation is present, Type IC fixtures must be used.*

INSTALLATION INTO JOIST CONSTRUCTION

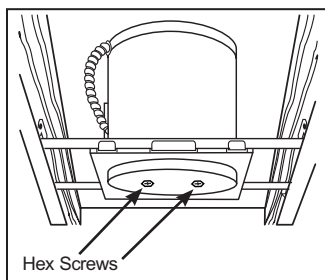


Figure 3

Step 1. Extend bar hangers to fit between joists. Bar hanger foot is contoured to easily align with bottom of joist (Fig. 3). Position fixture by hammering Real-Nails® into joists (Fig. 4).

(Note: Bar hanger may be shortened to fit 12" framing or smaller by breaking at score lines).

Step 2. Slide fixture along bar hangers into desired location. Use locking screws or slot to secure (Fig. 5).

Step 3. Follow steps 1-4 under Electrical Connection.

Step 4. When installing in drywall, cut appropriate sized hole.* After installing drywall, if necessary, adjust fixture for ceiling thickness by loosening hex screws that attach the round housing to the plaster frame (Fig. 3).

Relocating Fixture – Nail can be removed with hammer claw to allow easy repositioning of fixture without damaging bar hanger or nail (Fig. 6).

** Note: Cut a 4-1/2" (for 4" housings), 5-5/8" (for 5" housings) or 6-7/8" (for 6" housings) opening. For sloped ceiling housings, use the provided oval hole template.*

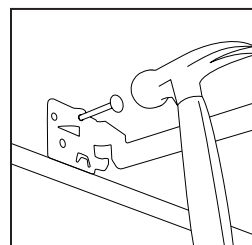


Figure 4

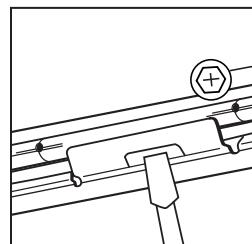


Figure 5

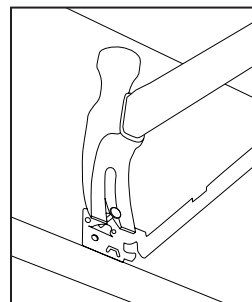


Figure 6



JUNO LIGHTING GROUP
an AcuityBrands company



INSTALLATION INSTRUCTIONS

JUNO TYPE IC & TC RECESSED HOUSING

INSTALLATION INTO SUSPENDED CEILING

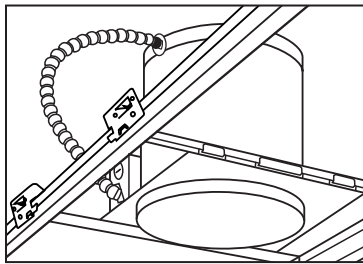


Figure 7

Step 1. Locate center of proposed opening on ceiling tile and cut appropriate sized hole.*

Step 2. Place ceiling tile in T-bar grid.

Step 3. Place fixture into position and snap bar hanger foot with integral T-bar clips onto T-bars (Fig. 7). Additional holes provided for securing with wire or screws (Fig. 7).

Step 4. Follow Steps 1-4 under Electrical Connection.

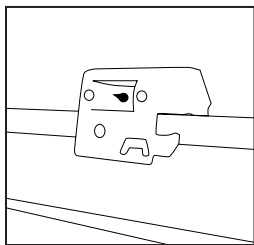


Figure 8

* Note: Cut a 4-1/2" (for 4" housings), 5-5/8" (for 5" housings) or 6-7/8" (for 6" housings) opening. For sloped ceiling housings, use the provided oval hole template.



Mark means lamp contains mercury.
Follow disposal laws.
See www.lamprecycle.org

ELECTRICAL CONNECTION INSTRUCTIONS

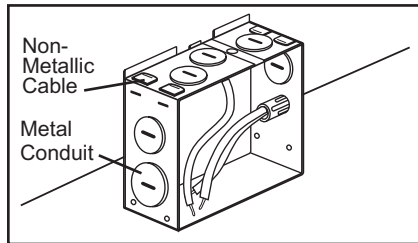


Figure 9

Step 1. Provide electrical service according to your local electrical code to the wiring box located on the plaster frame. Supply wire insulation must be rated for at least 90°C.

Step 2. Remove wiring box cover. Remove the appropriate knock-out(s) to accommodate the type of electrical service to be used/allowed by your local electrical code (Fig. 9):

Metal Conduit. Remove appropriate round knock-out(s) and connect conduit to wiring box with proper connectors (not supplied).

Non-Metallic (NM) Cable. Remove appropriate D-shaped NM cable knock-out(s). Insert NM cable through NM cable trap and make a 90° L-shaped bend in cable as shown (Fig. 10).

Step 3. J-Box with Quick Connectors: Strip supply wire 3/8", insert each supply wire into appropriate junction box connector. Connect black fixture wire to hot, white fixture wire to neutral and green fixture wire to ground.

Step 4. Place all wiring and connectors back in wiring box and replace cover.

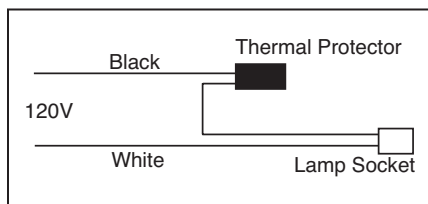


Figure 10

TRIM INSTALLATION

Install trim using coil, leaf, torsion, or push-in springs as provided. Remove socket paint protector cover and install proper lamp as listed on housing label.

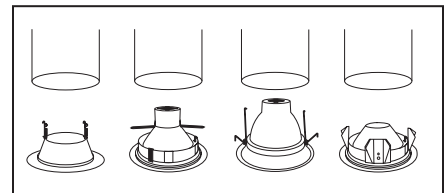


Figure 11

WARRANTY

Juno Lighting Group warrants that its products are free from defects in material and workmanship for one year from the date of purchase. Juno Lighting Group's obligation is expressly limited to repair or replacement, without charge, at Juno Lighting Group's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno Lighting Group's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

Product Services Phone (888) 387-2212

1300 South Wolf Road • Des Plaines, IL 60018 • Phone 800-323-5068 • www.junolightinggroup.com



JUNO LIGHTING GROUP
an AcuityBrands company