


AFU/AFUX SAFETY SWITCH MODELS M83, M6 AND M7
REPLACEMENT PARTS

• CONTROL

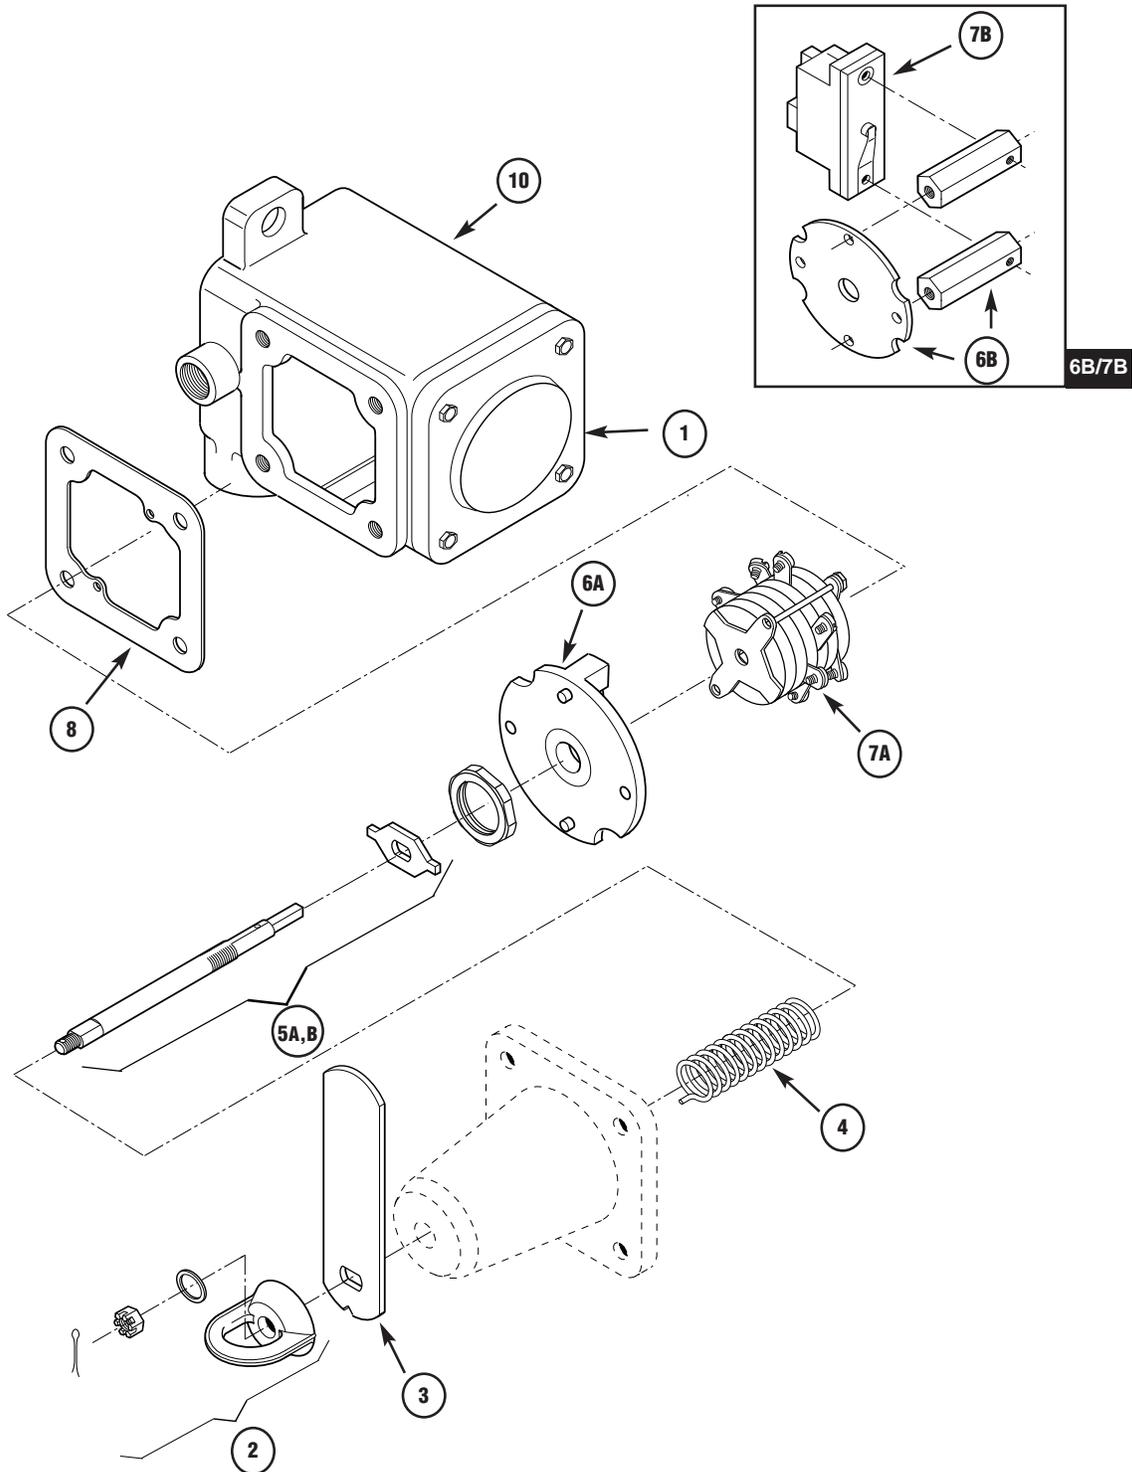

**AFU/AFUX SAFETY SWITCH MODELS M83, M6 AND M7*
REPLACEMENT PARTS**

ITEM	DESCRIPTION	USED ON	PART NO.
1	BLANK COVER ASSEMBLY WITH HARDWARE (Used as access cover for single-sided version)	AFU (W/ GASKET) AFUX (W/O GASKET)	AFA-K2 AFA-K3
2	PULL RING, NUT AND COTTER PIN, M7 & M6 Model	ALL AFU/AFUX, M83, M6, M7	AFU-K4-M83
3	INDICATING ARM ("FLAG")	ALL AFU/AFUX	AFU:26783A
4	SPRING: MAX. WEIGHT OF ROPE 15# MAX. WEIGHT OF ROPE 25#	AFU/AFUX 0333-01, 05, 10, 11, 50, 55 AFU/AFUX 0333-02, 06, 20, 22, 60, 66	AFU:26784A AFU:26304A
5A	OPERATING SHAFT ASSEMBLY, M83 Model (Includes item #2)	AFU/AFUX LEFT-HAND END, M83 AFU/AFUX RIGHT-HAND END, M83	AFU-K3L-M83 AFU-K3R-M83
5B	OPERATING SHAFT ASSEMBLY, M6 Model (Includes item #2)	AFU/AFUX LEFT-HAND END, M6, M7 AFU/AFUX RIGHT-HAND END, M6, M7	AFU-K3L-M6 AFU-K3R-M6
6A	SWITCH MOUNTING PLATE, M6 Model	ALL AFU/AFUX, M6, M7	AFU-K6
6B	SWITCH MOUNTING ASSEMBLY, M83 Model	ALL AFU/AFUX, M83	AFU-K5-M83
7A	REPLACEMENT SWITCH, Model M6 (Rotary)	AFU/AFUX, M6, M7 (2-, 4-POLE)	AFU:20S77-002
7B	REPLACEMENT SWITCH, MODEL M83 (Push button)	AFU/AFUX, M83 (2-POLE) AFU/AFUX, M83 (4-POLE)	GE CR115B2 ** (2) GE CR115B2 **
8	GASKET	ALL AFU	AFU:0205386
9A	COMPLETE LEFT-HAND ASSEMBLY (Includes items 2–8—not shown)	AFU OR AFUX 0333-10, -11, -50, -55 AFU OR AFUX 0333-20, -22, -60, -66	AFU OR AFUX L5*** AFU OR AFUX L6***
9B	COMPLETE RIGHT-HAND ASSEMBLY (Includes items 2–8—not shown)	AFU OR AFUX 0333-01, -05, -11, -55 AFU OR AFUX 0333-02, -06, -22, -66	AFU OR AFUX R5*** AFU OR AFUX R6***
10	BODY HOUSING ONLY	ALL AFU	AFU0333-0***
11	COVER BOLTS (Hex-head steel)	ALL MODELS	1/4-28 X 1 ****
12	REPLACEMENT C-CLIPS (For "non-slack" condition)	AFU OR AFUX, M6, M7	AFU-K7 (10 clips per kit—use as required)

* Replacement parts for models other than M83, M6 or M7 are not available and are not interchangeable with M83, M6 or M7.

(NOTE: For AFU models M76 & M85, contact Crouse-Hinds Canada.)

** Buy locally from General Electric Co.

*** When ordering, specify model # (M83, M6, or M7). **** Standard hardware—can be purchased locally.